


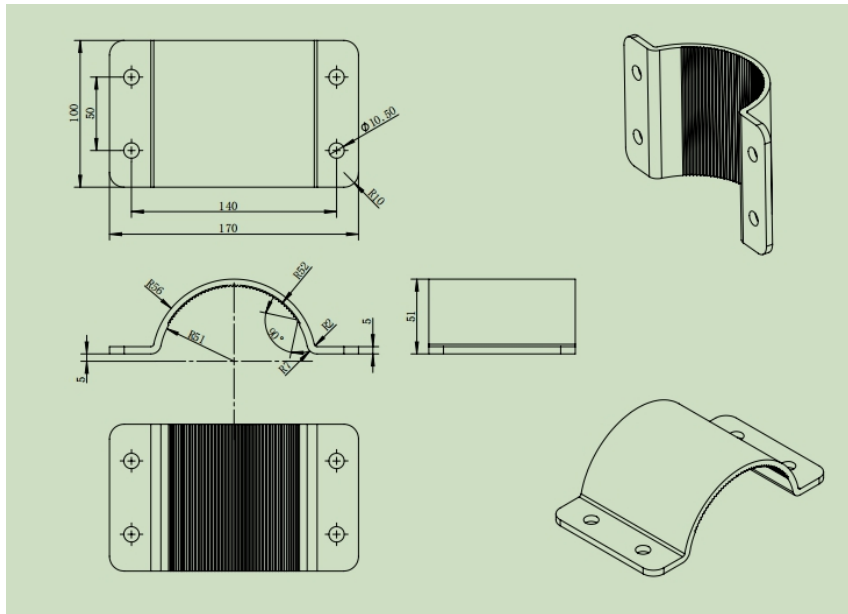

INSTALLATION KIT FOR LUMINAIRE

(1 set) Two mounting pieces to place around the pole for desired height adjustment

SOLAR PANEL SYSTEM INSTALLATION KIT

(1 set) Two mounting pieces to place around the pole for desired height adjustment

NOTE: The Solar Panel must be mounted below the luminaire to avoid light leakage on solar panel.

WIRE LENGTH


(6.5FT) The luminaire and solar panel connect by 6.5FT wire.

CONTROLLER AND BATTERY

- Controller Type: MPPT
- BMS included
- DoD% of battery set with the controller. Battery low-capacity protection, minimum 20% safety margin for battery. (i.e. 80%DoD)
- Replaceable Battery replaceable
- Replaceable Controller
- Compartment for Battery (IP65 Rated) & Controller (IP68 Rated)
- Working mode (3 modes)
 1. 100% brightness
 2. 80% 3-4Hrs
 3. 60% 5Hrs - Dawn 25%



FLAG POLE SOLAR SYSTEM INSTALLATION MANUAL

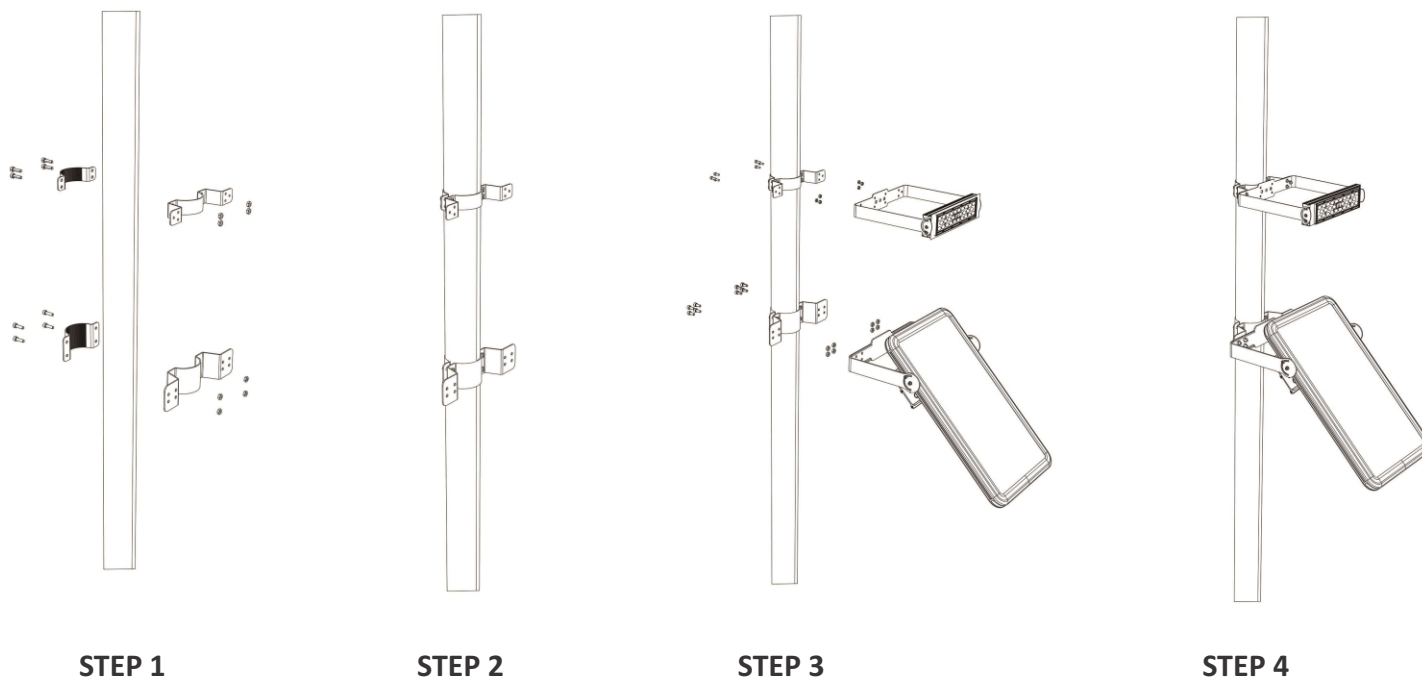

STEP 1: Find the 8 bolts and 8 nuts, LED module bracket and solar system bracket

STEP 2: Fix LED module bracket and solar system bracket on the pole, make sure the two brackets distance within 1.5M.

STEP 3: Fix the LED module and solar system on the brackets respectively, then connect wire correctly.

STEP 4: Adjust the LED module to spot the flag and push the button to turn on the solar system, then it would work automatically

