

JRDL-ES-CPS / LED DOWNLIGHT



WARNING: BEFORE YOU BEGIN READ THESE INSTRUCTIONS COMPLETELY AND CAREFULLY

- Turn off electricity at main fuse box (or circuit breaker box) before begin installation by removing fuse (or switching off circuit breaker).
- Be careful not to damage or cut the wire insulation (covering) during fixture installation. Do not let power cord or housing to contact any surface having a sharp edge. To do so may damage or cut the wire insulation, which could cause serious injury or death from electric shock.
- This fixture require 100-277V power input. The installer must confirm the input power at the source prior to installation.



INSTALLATION INSTRUCTIONS

6" (160mm) 8" (205mm) 10" (228mm)

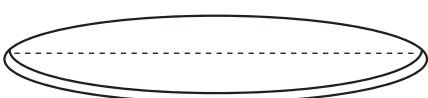 


Fig. 1

- Locate a suitable location for the fixture and cut a 6" / 8" / 10" round hole where the LED Downlight (A) will be installed.
- Ensure this location has access to a junction box with electrical wire from the switch (power supply) and allows for clearance depth of 5.5inches.
- A template (Fig. 1) is provided to assist in proper locating and cutting the hole.

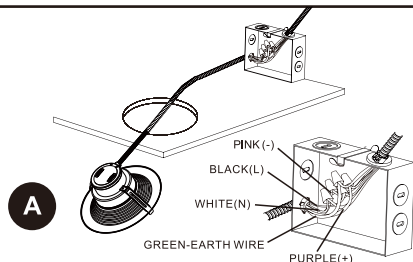


Fig. 2

- Connect the AC and dimming supply cables inside the hardwire junction box (not included) as follows: black to black, white to white, pink to pink (or gray), and purple to purple (Fig. 2).
- Then, place all wiring connections back into the hardwire junction box and close the cover.

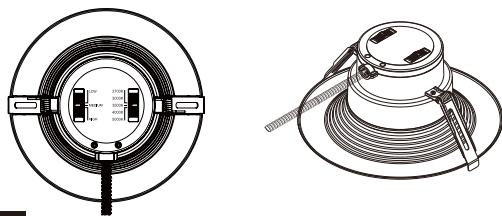


Fig. 3

- Adjust the CCT (correlated color temperature) and Lumen/Power to the desired levels using the switches on the back of the fixture (Fig. 3).
- Push the spring-loaded clips on the LED Downlight (A) upwards and insert the base of the LED Ultra-Thin Downlight (A) into the mounting hole shown at Fig. 4.

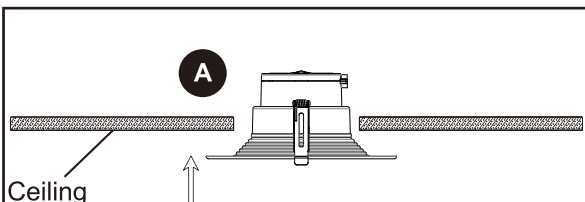


Fig. 4

- Release the clips, and the fixture will grip flush with the ceiling or drywall.
- Once assembly is complete, turn on the power and confirm that the fixture is working properly:

